




FIRST FENCE USA

WE LISTEN. WE CARE. WE DELIVER.

NewStead Wood Plastic Composite Fencing

Installation Guide

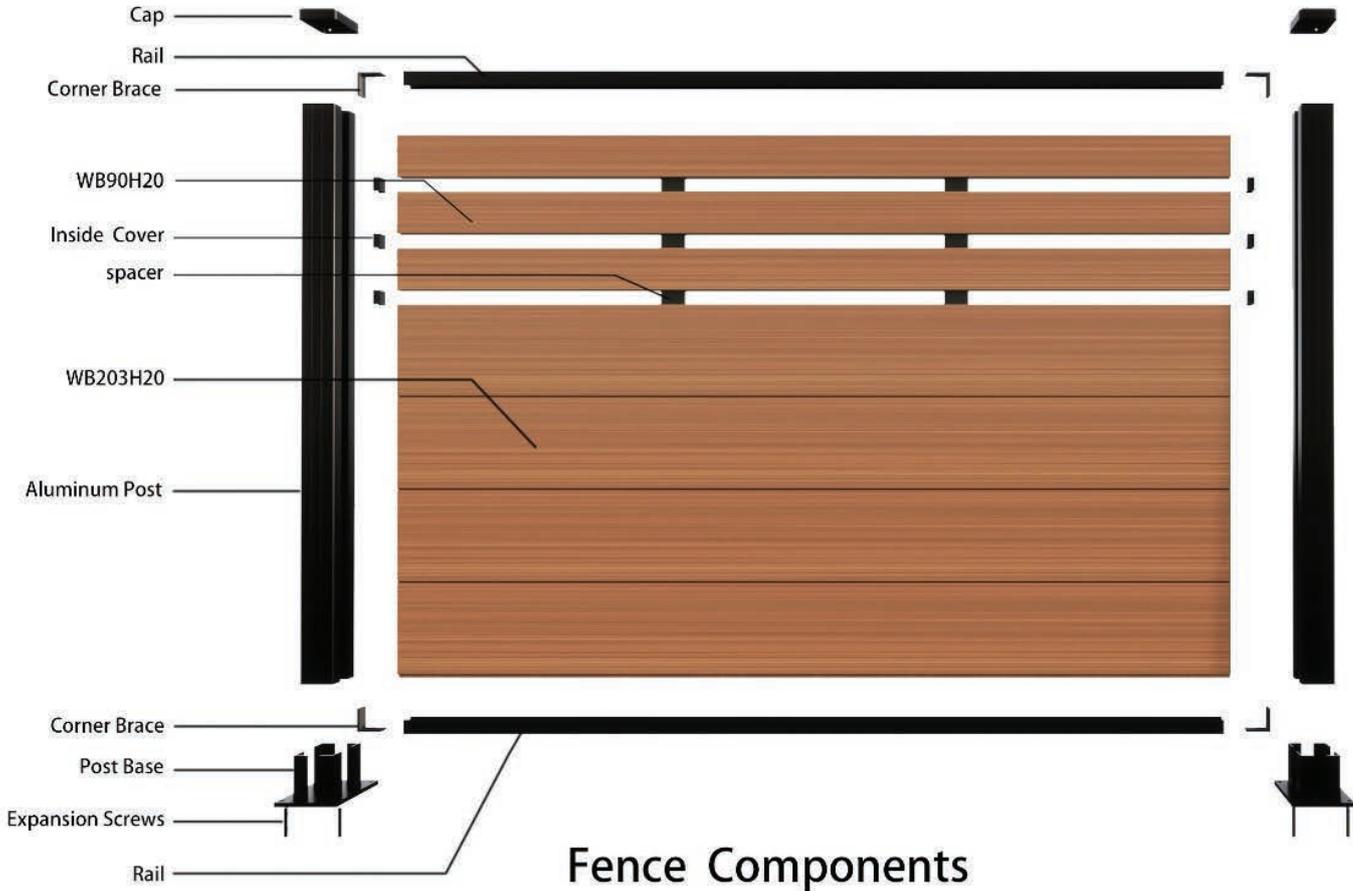

Tools and Materials

The installation of a wood plastic composite fence requires basic tools and materials, including:

- WPC fence panels and posts
- Post Bases (required for bolt-down/surface-mount Installation)
- Post Mix or similar for post holes (for in-ground/dig in installation)
- Post Hole Digger or Power Auger
- Level
- Power Drill (required for bolt-down installation)
- Screws and Brackets
- Tape Measure
- Safety Gear (work gloves, safety glasses)



Call our Expert Sales Team for more information

www.firstfenceusa.com | sales@firstfenceusa.com | (945) 941-2111



FIRST FENCE USA

WE LISTEN. WE CARE. WE DELIVER.

NewStead Wood Plastic Composite Fencing

Installation Guide

Step-by-Step Installation Guide

Measure and Mark

First, determine the placement of your fence and mark out the post locations. Use a tape measure to ensure equal spacing.

Dig-In/In-Ground Installation

Use a post hole digger or power auger to dig the holes for your fence posts. The depth should be about one-third of the post's height, plus an extra 6" for gravel.


Pour a 6" layer of gravel into each hole for drainage, then place a post in the hole, ensuring it's level. Mix Post Mix/Concrete according to the product instructions and pour it into the hole, filling to about 3" below ground level. Check that the post is still level and make adjustments if necessary. Allow the concrete to set according to manufacturer's instructions.

Bolt-Down (Surface-Fixed) Installation


Drill the Post Base into the existing base using 4 expansion fixing bolts.

Place the post inside the Post Base.


Ensure the post is completely vertical and straight, then fit the bottom rail to the post.

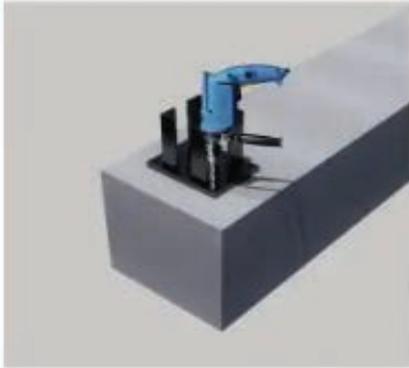

Drill the Post Base into the ground

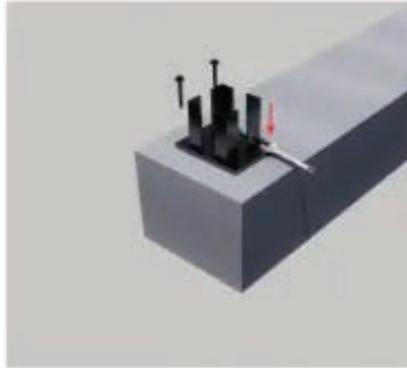


Fix the Post Base with the expansion screws

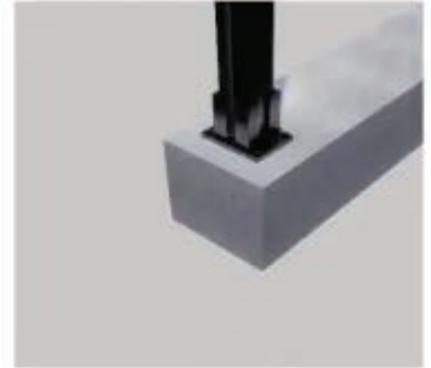


Fix the Post on the Post Base


General Installation steps

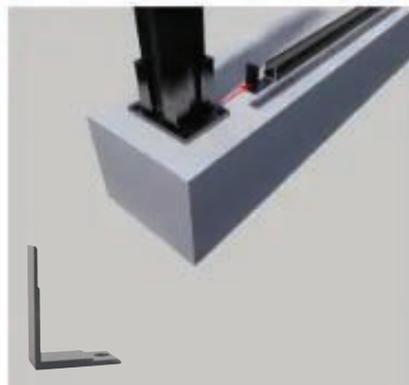

Put the Corner Brace in the slot of the Bottom Rail

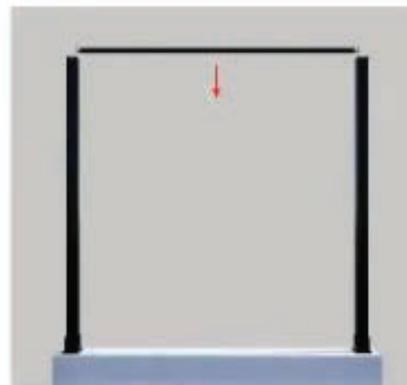

Slide the rail down to the bottom of the posts

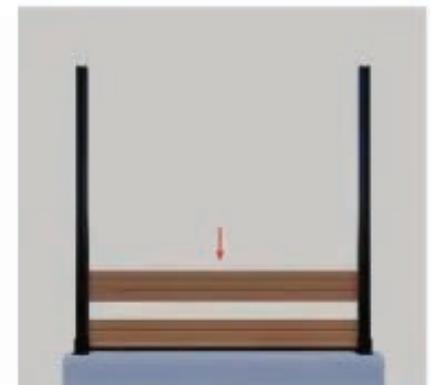

Slide the fence panels into place



Insert the spacers (if using)



Install the upper rail and side covers



Install the caps onto the posts